

POSIZIONI DI MONTAGGIO

MOUNTING POSITIONS

EINBAULAGE

IMPORTANTE! In fase di ordine precisare sempre la posizione di montaggio e l'orientamento del volantino di comando (es. B3/1U).

IMPORTANT! When ordering always mention assembly position and position of the control handwheel (eg. B3/1U).

WICHTIG! Bei Bestellung müssen stets Einbaulage und Lage des Handverstellrades angegeben werden (z.B.: B3/1U).

B3	B6	B8	B7
B3/1U B3/2U B3/1L B3/2L B3/1D B3/2D B3/2R B3/1R U (STANDARD) R L D	B6/2U B6/1U B6/2L B6/1L B6/1D B6/2D B6/1R B6/2R R U (STANDARD) D L	B8/1U B8/2U B8/2L B8/1L B8/2D B8/1D B8/1R B8/2R D R U (STANDARD) L	B7/1U B7/2U B7/1L B7/2L B7/2D B7/1D B7/2R B7/1R (STANDARD) U D R L
Posizione morsettiera Terminal board position Lage dese Klemmkastens			

B5	B5/1U	B5/1L	B5/1D	B5/2R
B5/2U B5/1L B5/2L U (STANDARD) R L D	B5/1L B5/2L (STANDARD) U D L	B5/1D U (STANDARD) D R	B5/2D U (STANDARD) R	B5/1R U (STANDARD) L
Posizione morsettiera Terminal board position Lage dese Klemmkastens				

V3/1U V3/2U V3	V1/2U V1/1U V1	V6/1U V6/2U V6	V5/2U V5/1U V5
----------------------	----------------------	----------------------	----------------------